

NB: this document contains technical information and may be required in case of licensing and/or control. Please save this for future reference!

David van Schie, party rental BV Honderdland 10 2676 LS Maasdijk

T +31 (0)174 622 192 E info@davidvanschie.nl W www.davidvanschie.nl

CoC Haaglanden 27237062 VAT NL 8218 12 099 B 01

Instruction manual barbecue Green Fire

Important:

- Only use the pressure regulator supplied with the appliance
- Only suitable for propane gas and outdoor use
- Always keep gas cylinders upright during usage and storage; this also applies to empty cylinders
- Some parts of the barbeque may become very hot
- Always close the cylinder valve of the gas cylinder after usage or in case of emergency situations

Installation/assembly:

- Connect the gas hose to the barbeque by using the quick connector; the quick connector will lock when you press it firmly enough.
- Attach the pressure regulator to the gas cylinder; there must be a rubber seal ring between the cylinder and the regulator (note: left-handed thread)
- Always use the grease trays supplied with the barbeque

Starting up the barbeque:

- Open the cylinder valve of the gas cylinder
- Push in the control knob in O position
- Keep the control knob pushed in and turn it to MAX (large flame), gas will start to flow
- Keep the control knob pushed in and push on the ignition button several times until the burner is completely lit.
- Keep the control knob pushed in: release after 15 seconds
- Size of the flame can be adjusted by turning the knob to MAX (large flame) or to MIN (small flame)

Switching off the barbeque:

- Turn the control knob back to O position
- Close the cylinder valve on the gas cylinder

Troubleshooting:

- If the burner accidentally breaks down; wait for 10 minutes before turning on the barbeque again

Cleaning:

- Turn the barbeque to full capacity MAX (large flame) and burn off any grease or residue on the grills and baking tray. Brush off any residuals with a coarse brush or steel brush.
- Do not use any aggressive cleaning products on the outside. The barbeque can be cleaned with a damp cloth and a mild cleaning product once it has cooled down.
- The grease trays and wind shield are removable components and need to be removed before cleaning.

Technische gegevens	CE 0063 / #150804 15216 004
artikel:	green fire 3-brander
land:	nl
belasting:	(hs) 17,0 kW
category:	I 3P
verbruik:	850 g/h
inrichting:	G31 - 50 mbar
producent:	Hendi, Steenoven 21, 3911 TX, Rhenen, NL

