

Manual griddle

General:

The griddle has the highest temperature in the middle of the griddle (maximum 300°C)
At the front, the temperature is lower to keep the grilled food at the right temperature.

Instructions:

Place the grease tray.

Switch on the device with the on / off switch.

Use the thermostat knob to set the desired temperature.

The orange light turns on.

When the griddle has reached the desired temperature, the orange light turns off.

Now you can bake; use butter or oil

Cleaning after use:

Switch off the device with the on/off switch.

After use let cool down the griddle and clean with a plate knife.

Clean the housing with a slightly damp cloth.

Take out the grease tray and clean it well.

Note!

Never clean the griddle with a steel brush and for the housing don't use aggressive substances.



Technical data:

- Plate size: 69 x 41 cm
- Voltage: 230 V
- Power: 3500 W